


Exowrap, the 'one-step' insulation system, is the quick and easy way to insulate high temperature surfaces in vessel engine rooms. ExoWrap is a revolutionary system made from biosoluble vitreous silicate fibre which is reinforced with an outer jacket of heat sealed aluminum foil. In tape or blanket format, ExoWrap is applied in one step eliminating the need for bulky and time consuming layered insulation. ExoWrap can be easily removed and reinstalled by using the ExoWrap 'Silhesive' Tape and is rated for use to 1,000° C max. ExoWrap can be used throughout the engine room.

ExoWrap Tape

For use on bent and flanged pipes in areas where maintenance is not a consideration and/or space is limited. ExoWrap has a pressure sensitive adhesive on the inner side for ease of installation.

Application Instructions

- 1 Remove dirt, oil, scale and excessive moisture from surface.
- 2 ExoWrap is wound around the pipe in a spiral motion using a 50% overlap to ensure good adhesion. Be sure that the foil edges are securely fastened. Ends can be secured with wire or clips if desired.

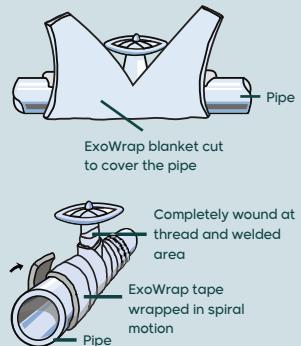

Exowrap Insulation System					
Item code	IMPA	Width	Thickness	Length	Rolls/Box
9140	813871	50 mm (2")	3 mm (1/8")	7.7 m (25')	24
9141	813872	100 mm (4")	12 mm (1/2")	3.3 m (10')	6
9142	813873	300 mm (12")	25 mm (1")	7.7 m (25')	2
9143	813874	600 mm (24")	25 mm (1")	7.7 m (25')	1
Silhesive Tape					
9144	813870	100 mm (4")	1 mm (1/25")	15.5 m (50.5')	27

ExoWrap Blankets

For use on straight pipes, valves, exhaust equipment, turbochargers, angled and uneven surfaces and anywhere that insulation is required. ExoWrap Blankets are secured with ExoWrap 'Silhesive Tape' for ease of maintenance.

Meets IMO Resolution MSC.61(67)

Meets SOLAS Regulation II - 2/15.2.10

Each ExoWrap Blanket Roll is supplied with one roll of ExoWrap Silhesive Tape for fastening.

Application Instructions

- 1 Cut the ExoWrap Blankets to size with a utility knife or shears. Wrap around the surface to be insulated, butting the ends together forming a seam.
- 2 Secure and seal the seam with Silhesive Tape.
- 3 To remove ExoWrap Blanket, cut the Silhesive Tape and unwrap from metal surface. To reinstall, new Silhesive Tape must be applied.

